

D3 Advanced Workshop Shooting Menu Set Up

Pre-Shooting Camera Set Up

<i>Set Up</i>	<i>Control</i>	<i>Landscape</i>	<i>Sports</i>	<i>People</i>	<i>Blank</i>
*Exposure Mode	Exposure Mode Button	Manual	Shutter Speed	Aperture Speed	Program
*Shooting Mode	Mode Dial	Single	Continuous High	Single	Single
*Metering Choice	Meter Dial	Matrix or Spot	Matrix or Center Weighted	Matrix	Matrix
*AF Mode	Focus Mode Selector	AF-S	AF-C	AF-C	AF-C
*AF Area Mode	AF-Area Selector	Single	Dynamic	Dynamic	AUTO
*Auto-Bracketing	BKT Button	7F 1.0	Off	Off	Off

** Must be set manually*

D3 Shooting Menu Set Up

<i>Option</i>	<i>Bank A</i>	<i>Bank B</i>	<i>Bank C</i>	<i>Bank C</i>
Shooting Menu Bank	Landscape	Sports	People	Blank
Active Folders	100	100	100	100
File Naming	LAN	SPO	PEO	DSC
Slot Two	Overflow	Overflow	Overflow	Overflow
Image Quality	NEF	JPEG	NEF	JPEG fine
Image Size	N/A	Large	N/A	Large
Image Area	Auto DX Crop	Auto DX Crop	Auto DX Crop	Auto DX Crop

***D3 Advanced Workshop
Shooting Menu Set Up***

Jpeg Compression	N/A	Optimal Quality	N/A	Optimal Quality
NEF RAW Recording	Lossless Compression	N/A	Lossless Compression	N/A
• NEF RAW bit depth	14 bit	N/A	14 bit	N/A
White Balance	Cloudy A2 or PRE	Direct Sunlight	Cloudy A2	AUTO
Set Picture Control				
• Standard		Standard		Standard
• Neutral	Neutral		Neutral	
• Vivid				
• Monochrome				
Manage Picture Control	N/A	N/A	N/A	N/A
Color Space	sRGB	sRGB	sRGB	sRGB
Active D-Lighting	Normal	OFF	Normal	Normal
Vignette Control	OFF	OFF	OFF	OFF
Long Exp. NR	Off	Off	Off	Off
High ISO NR	Normal	Normal	Normal	Normal
ISO Sensitivity Settings	200	200	200	200

**D3 Advanced Workshop
Shooting Menu Set Up**

• ISO Sensitivity Auto Control	OFF	OFF	OFF	OFF
Live View	Tripod	Hand-held	Tripod	N/A
• Release Mode	Single	Continuous Low or High	Single	N/A
Multiple Exposure	N/A	N/A	N/A	N/A
Interval Timer Shooting	N/A	N/A	N/A	N/A

D300 Custom Setting Menu

<i>Option</i>	<i>Bank A</i>	<i>Bank B</i>	<i>Bank C</i>	<i>Bank C</i>
Custom Setting Bank	Landscape	Sports	People	Blank
Autofocus				
a1 AF-C Mode Priority	Release + Focus	Release + Focus	Release + Focus	Release
a2 AF-S Mode Priority	Focus	Focus	Focus	Focus
a3 Dynamic AF area	9 Points	21 Points	9 Points	9 Points
a4 Focus Tracking with Lock On	Normal	Long	Normal	Normal
a5 AF Activation	OFF AF-ON Only	OFF AF-ON Only	OFF AF-ON Only	ON Shutter / AF-ON
a6 Focus Point Illumination				
• Manual Focus Mode	ON	ON	ON	ON

***D3 Advanced Workshop
Shooting Menu Set Up***

	• Continuous Mode	ON	ON	ON	ON
	• Focus Point Brightness	0 - Normal	0 - Normal	0 - Normal	0 - Normal
a7	Focus Point Wrap-Around	ON	ON	ON	OFF
a8	AF Point Selection	51 Points	51 Points	51 Points	51 Points
a9	AF-ON Button	AF-ON	AF-ON	AF-ON	AF-ON
a10	Vertical AF-On Button	AF-ON	AF-ON	AF-ON	AF-ON
	<i>Metering and Exposure</i>	Landscape	Sports	People	Blank
b1	ISO Sensitivity step value	1/3	1/2	1/3	1/3
b2	EV steps for exposure cntrl.	1/3	1/2	1/3	1/3
b3	EV steps for exposure comp.	1/3	1/2	1/3	1/3
b4	Easy exposure compensation	On (Auto Reset)	On (Auto Reset)	On (Auto Reset)	OFF
b5	Center Weighted Area	8mm	8mm	8mm	12mm
b6	Fine Tune Optimal Exposure	No	No	No	No
	<i>Timers / AE Lock</i>	Landscape	Sports	People	Blank
c1	Shutter-Release Button AE-L	OFF	OFF	OFF	OFF

***D3 Advanced Workshop
Shooting Menu Set Up***

c2	Auto Meter Off Delay	30 Seconds	30 Seconds	30 Seconds	6 Seconds
c3	Self Timer Delay	2 Seconds	2 Seconds	2 Seconds	10 Seconds
c4	Monitor Off Delay	1 Minutes	1 minutes	1 Minutes	20 Seconds
	<i>Shooting & Display</i>	Landscape	Sports	People	Blank
d1	Beep	Off	Off	Off	Off
d2	Shooting Speed				
	• Continuous High Speed	9fps	11fps	9fps	9fps
	• Continuous Low Speed	5fps	9fps	5fps	5fps
d3	Max. Continuous Release	130	130	130	130
d4	File Number Sequence	On	On	On	On
d5	Control panel/viewfinder				
	• Rear Control Panel	ISO	ISO	ISO	ISO
	• Viewfinder Display	Frame Count	Frame Count	Frame Count	Frame Count
d6	Shooting Info Display	Auto	Auto	Auto	Auto

D3 Advanced Workshop
Shooting Menu Set Up

d7	LCD Illumination	Off	Off	Off	Off
d8	Exposure Delay Mode	ON	OFF	OFF	Off
	<i>Bracketing & Flash</i>	Landscape	Sports	People	Blank
e1	Flash Sync Speed	1/250s (Auto FP)	1/250s (Auto FP)	1/250s (Auto FP)	1/250s
e2	Flash Shutter Speed	1/60	1/60	1.60	1/60
e3	Modeling Flash	On	On	On	On
e4	Auto Bracketing Set	AE	AE	AE	AE & Flash
e5	Auto Bracketing (Mode M)	Flash / Speed	Flash / Speed	N/A	Flash / Speed
e6	Bracketing Order	under >MTR > over	under >MTR > over	under >MTR > over	MTR > under > over
	<i>Controls</i>	Landscape	Sports	People	Blank
f1	Multi-Selector Center Button				
	• Shooting	Select center focus point	Select center focus point	Select center focus point	Select center focus point
	• Playback	Zoom - On Medium Mag	Zoom - On Medium Mag	Zoom - On Medium Mag	Thumbnail on /off
f2	Multi-Selector	Off	Off	Off	Off
f3	Photo Info / Playback	Off	Off	Off	Off

D3 Advanced Workshop
Shooting Menu Set Up

f4	Assign FUNC. Button				
	• FUNC. Button press	Virtual horizon	Center-Weighted	Spot	OFF
	• FUNC. Button + dials	OFF	Focus point-selection	Focus point-selection	Choose image area
f5	Assign Preview Button				
	• Preview button press	Preview	Preview	Flash off	Preview
	• Preview button + dials	OFF	OFF	OFF	OFF
f6	Assign AE-L/AF-L button				
	• AE-L/AF-L button press	AE lock (Reset of Release)	AE lock (Reset of Release)	AE lock (Hold)	AE/AF lock
	• AE-L/AF-L + command dials	OFF	OFF	OFF	OFF
f7	Customize Command Dials				
	• Reverse Rotation	ON Reverse Rotation	ON Reverse Rotation	ON Reverse Rotation	OFF
	• Change main / sub	OFF	OFF	OFF	OFF
	• Aperture setting	ON	ON	ON	ON
	• Menus and playback	OFF	OFF	OFF	OFF
f8	Release Button to Use Dial	Off	Off	Off	OFF
F9	No Memory Card	Lock	Lock	Lock	OK

***D3 Advanced Workshop
Shooting Menu Set Up***

F10	Reverse Indicators	- 0 +	- 0 +	- 0 +	+ 0 -
------------	---------------------------	-------	-------	-------	-------

Important: Please review ALL of the **Shooting Bank** and **Custom Settings Bank** settings before loading the **D3 Bank** settings in your camera. Make note of the settings that you'd like to change on this form, then load the BIN file. After loading the BIN file make the settings change to the individual banks, go to **Wrench Menu** – Select **Save/Load** – **Save Settings** to a spare CF card.