

Instructions for downloading the Shooting and Custom Menus bin file and installing it on your D300, D700 or D3 Nikon Camera. Important: Before downloading and installing the bin file that contains the individual menu settings for the Shooting and Custom menus. First download the hard copy of the Shooting and Custom Menus and review the settings. Once you install the bin file all of the individual menu settings in the Shooting and Custom Menu will be changed. Before loading the bin file read number 12 you might want to write down your previous settings before loading the bin file.

1. Download the bin file for your camera.
2. The bin file will download automatically to your computer.
3. For the **D300, D700** or **D3** cameras insert a spare reformatted CF card in your camera. Turn the camera on, go to the **Wrench Menu** (Set Up Menu), select **Save/Load** settings, select **Save** Settings. Turn the camera off and remove the CF card and set it aside.
4. Insert another Compact flash card into the card reader on your computer.
5. After the CF card has been recognized drag the bin file directly on to the CF card. Note: *You cannot open a bin file on your computer.*
6. Eject the CF card from the card reader.
7. Insert the CF card into your camera.
8. Turn the camera **on**.
9. Press the **Menu Button**.
10. Go to the **Wrench Menu** (set up menu) scroll up or down until you locate **Save/Load Settings**. Select **Load setting**, and press the **OK** button. The bin file containing the Shooting and Custom Menu settings will upload to your camera. Note: the uploading process is *very brief*.
11. Go to the **Shooting** and **Custom menus** and check the titles for banks A, B, C, D titles. They will now display the titles for each bank and the individual settings for the **Shooting** and **Custom** menus will have been changed.
12. After loading the bin file the following menu items will need to be reset:
 - **Wrench Menu – Copyright Information**
 - **Wrench Menu – World Time**
 - **Wrench Menu – Non CPU Lens Data**
 - **Wrench Menu – AF Fine Tuning**
 - **Custom Menu – b6 Fine Tuning Optimal Exposure**
 - **My Menu**
13. After reset the previous items. Turn the camera on, press the Menu Button, select the Wrench Menu (set up), scroll down and select

Save/Load Settings, select **Save Settings**, press the **OK** button. You have now saved a copy of your new **Shooting** and **Custom Menus** plus as a bin file on the CF card.

14. Turn the camera off. Remove the card. Insert the card in the card reader on your computer, when the CF card is recognized by the computer, double click on the card icon to open it, drag the bin file on to the desktop and reject the CF card from the card reader. Create a folder on your computer for the bin file. If/when you want to reinstall the **Shooting** and **Custom** menus settings you now have a bin file saved on your computer.
15. Remember the spare CF card that you set aside in step #3? If you decide that you want to reset the **Shooting** and **Custom Setting Banks** back to the original settings. Insert the card in the camera go to the **Wrench Menu**, select **Save/Load Settings**, select **Load**, press **OK** and your back to where you started.